

Semi-major	Additional Information	Detailed information
C0	00	Received D level command during RAS mode.
	01	Received "LE" during executing RAM program.
	02	Received "LE" before receiving "LD" command.
C1	00	After receiving the 'RT', a loss in the download program.
	01	Flash ROM write error.
	02	Sum check error of program load.
	03	After receiving the 'RT', version error.
	04	Flash ROM erase error.
	05	File name error of control area format.
	06	Data size error of control area format.
C2	01	BD received the command excluding "RT", "LD", and "LE".
C3	01	Download header error. (D-Code is not '00')
	02	Download header error. (E-Code is not '1' or 'H')
	03	Block number error. (D-code is 'LD')
	04	Data length error.

Semi-major	Additional Information	Detailed information																
F1	00	Over current error																
F2	xx	<p>Option setup is unusual.</p> <p>XX: Data when judged erroneous (sensor port content)</p> <table border="1" data-bbox="1118 837 3996 951"> <thead> <tr> <th data-bbox="1118 837 1476 868">b7</th> <th data-bbox="1476 837 1835 868">b6</th> <th data-bbox="1835 837 2194 868">b5</th> <th data-bbox="2194 837 2553 868">b4</th> <th data-bbox="2553 837 2912 868">b3</th> <th data-bbox="2912 837 3270 868">b2</th> <th data-bbox="3270 837 3629 868">b1</th> <th data-bbox="3629 837 3996 868">b0</th> </tr> </thead> <tbody> <tr> <td data-bbox="1118 868 1476 951">-</td> <td data-bbox="1476 868 1835 951">-</td> <td data-bbox="1835 868 2194 951">-</td> <td data-bbox="2194 868 2553 951">-</td> <td data-bbox="2553 868 2912 951">RRBOX</td> <td data-bbox="2912 868 3270 951">RSHT</td> <td data-bbox="3270 868 3629 951">FRBOX</td> <td data-bbox="3629 868 3996 951">FSHT</td> </tr> </tbody> </table>	b7	b6	b5	b4	b3	b2	b1	b0	-	-	-	-	RRBOX	RSHT	FRBOX	FSHT
b7	b6	b5	b4	b3	b2	b1	b0											
-	-	-	-	RRBOX	RSHT	FRBOX	FSHT											